

## DisplayPort Optical Extender **DSFP**



***Thank you for purchasing DSFP***

*Optical DisplayPort pigtail module extender with DPCP support extends DisplayPort signal up to 300M using single strand multi-mode optic fiber. It supports display resolution up to 2560x1600(WQXGA).*

## Check your package

Check the package and make sure you have everything:

### Contents

- (1) DSFP Transmitter & Receiver
- (2) +5V DC Power supply x 2pcs
- (3) User's Guide

If any of these items are missing in your package, contact OPHIT or your supplier for support.

**NOTE:** Package content may differ if you have placed a special order or placed order from anywhere other than OPHIT CO., LTD. OPHIT CO., LTD. reserves the right to make changes without further notice to a product described herein to improve reliability, design, packaging or function.

## Installation

### Installation Steps:

1. Connect the Transmitter module to the DisplayPort source device.
2. Connect the Receiver module to the display.
3. Connect a single strand multi-mode SC terminated optic fiber(50/125 $\mu$ m) from the Transmitter to the Receiver module.



## Installation


4. Connect the included +5V DC power supply into the Transmitter.
5. Connect the included +5V DC power supply into the Receiver.
6. Blue LED indicator on the modules will be light up after all connections are completed.



DC +5V  
Power jack

**NOTE:** The Transmitter and the Receiver modules must be connected to the included power supplies for proper operation.  
**Transmitter module must be powered on first.**

## Application

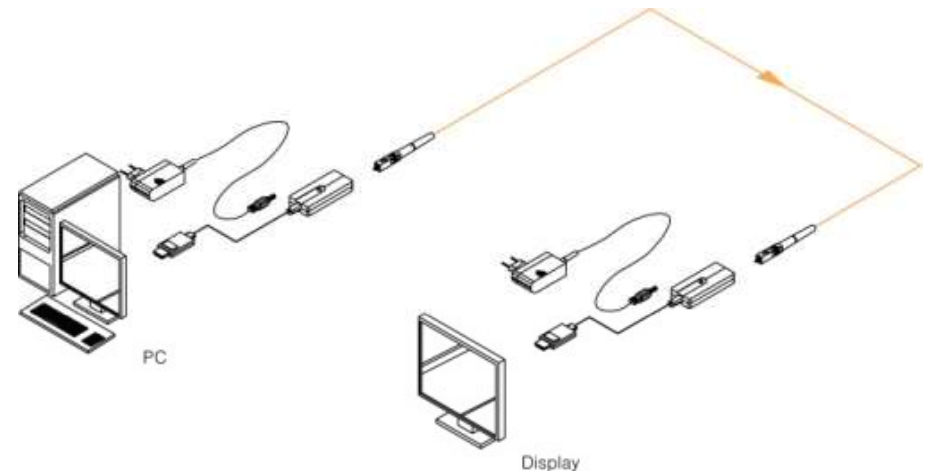

### ► Trouble shooting depending on LED indicator status

**No display** TX Solid / RX Blink

- Check if monitor is powered on
- Check if DisplayPort source is selected on monitor input setting

**No display** TX Blink / RX Solid

- Check if the PC and display are powered on and properly booted.
- Check if optic fiber is connected properly.

**No display** TX Blink / RX Blink

- Please make sure that power supply is connected into TX and RX.
- Reset the system by de-plugging and re-plugging all connection.

# Warranty

We, OPHIT hereby warrant the final purchase of our product as follows.  
In the case of troubles on our products, please contact the shop purchased.

## **One year limited warranty**

Our customers have right to be served with free of charge when there is trouble in this product during 1(one) year from the day purchased.

## **Out of warranty services**

When you request services (in the case of non manufacturing defects but the troubles by misusage), may served with charge as follows.

- Defects of products caused by accident, disaster.
- Damages of products caused by the customer's carelessness or mistaken application.
- Damages of products caused by the application of the parts or products not supplied or sold by our company.
- Damages of products and related defects caused by not our staff or the men or group not nominated by us for services.

The interchanged parts and products for maintenance services shall be replaced as new parts and products operating normally, and the inter-changed parts and products shall be subjected to our company.



# RMA Request Form

RMA No.:

Customer Name:		Return Date:	
Company Name:		Phone:	
Model Name:		E-Mail:	
Serial No:		Place of Purchase:	
Address: (For RMA Return)			
RMA details: (Please describe RMA status, application used and failure symptom)			



---

## Technical and Sales Support

### KOREA HQ

#### OPHIT CO., LTD.

#301(Sun technovil), 77, Deogyong-daero 1471beon-gil, Yeongtong-gu, Suwon-si,  
Gyeonggi-do, 16681, Republic of Korea

Tel: + 82 (0)31 695 5543

Fax: + 82 (0)31 695 5545

E-Mail

jhchoi35@ophit.com

---

## Regional Office

### USA

#### Foreseeson Custom Display

2210E, Winston Road Anaheim,  
CA 92806 USA

Tel: +1-714 300 0540

Fax : +1-714 300 0546

E-mail: jhan@foreseesonusa.com

### UK

#### Foreseeson UK Ltd

1 Wolsey Road, East Molesey, Surrey, KT8 9EL,  
United Kingdom

TEL: +44-208-546-1047

FAX: +44-208-391-4953

E-mail: jason.kwon@fsnmed.eu

### Europe

#### Foreseeson GmbH

Industriestrasse 38a  
63150 Heusenstamm, Germany

TEL: +49 (0) 6104-643980

FAX: +49 (0) 6104-64398-11

E-mail: jason.kwon@fsnmed.eu

[www.ophit.com](http://www.ophit.com)

